

# BAND & ORCHESTRA INSTRUMENT STANDS

		Model
BRASS INSTRUMENTS	Trumpet	DS410B, DS510BB, DS513BB, DS501B
	Cornet	DS510BB, DS513BB, DS501B
	Flugelhorn	DS513BB, DS531BB, DS503B
	Trombone	DS420B, DS520B
	French Horn	DS550BB
	Euphonium	DS552B
	Tuba	DS552B, DS553B
	Baritone Horn	DS552B
	Alto Horn	DS552B
	Sousaphone	DS551B

			Model
WOODWIND INSTRUMENTS	Flute	Piccolo	DS543BB, DS504B
		C	DS460B, DS532BB, DS538B, DS543BB, DS640BB, DS602B
		Low B	DS461B
		Alto	DS562BB
	Clarinet	B <sup>b</sup>	DS440B, DS532BB, DS538B, DS543BB, DS640BB, DS602B
		Bass	DS561B
	Saxophone	Soprano	DS531BB, DS533BB, DS538B, DS503B
		Alto	DS431B, DS530BB, DS532BB, DS533BB, DS536B, DS537B, DS538B, DS630BB, DS730B
		Tenor	DS432B, DS530BB, DS532BB, DS533BB, DS536B, DS537B, DS538B, DS630BB, DS730B
		Baritone	DS535B, DS536B
	Bassoon		DS561B

		Model
STRINGED INSTRUMENTS	Violin	DS571BB, DSP57WB, DSP57SB
	Viola	DS571BB, DSP57WB, DSP57SB
	Cello	DS580B
	Double Bass	DS590B

